



Montering av kledning


Slik spikrer du stående kledning

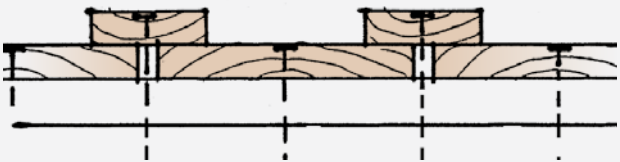


Rektangulær lekt overligger

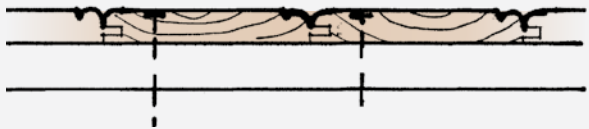


Sveitser med staff

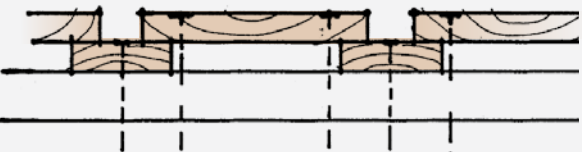


Rektangulær lekt underligger

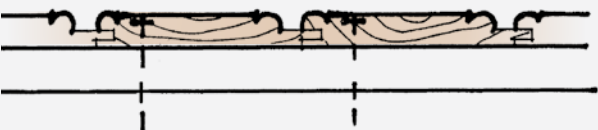

Sveitser med dobbelstaff

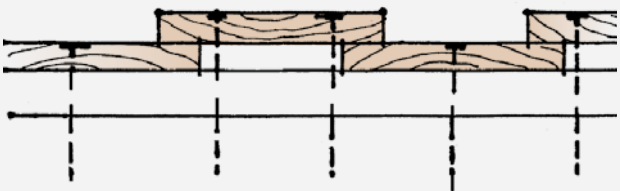


Rektangulær

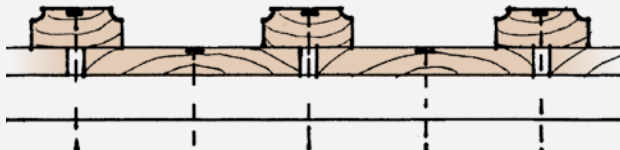


Empirelekt


Slik spikrer du liggende kledning

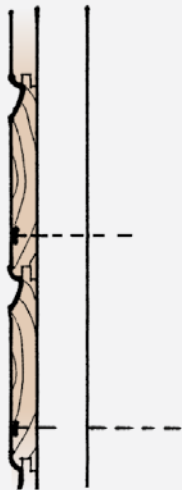



Vestlands

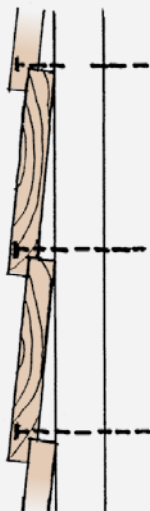


Enkeltfals

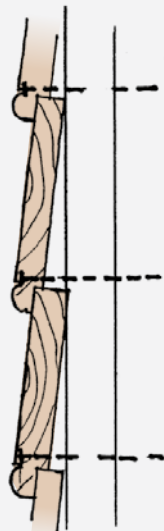


Empire

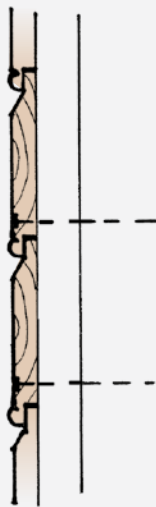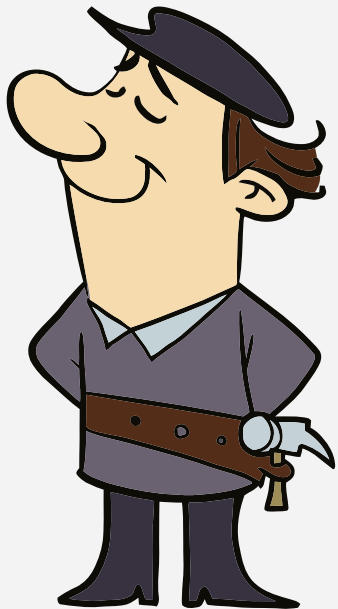


Dobbelfals med staff

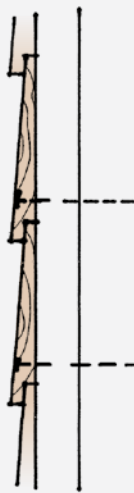

Skråskåret

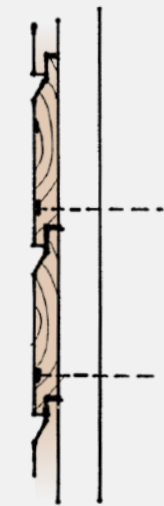

Dobbelfals gammel type

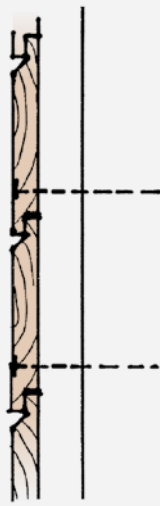

Dobbelfals

Unngå spikring nær marg av under- og overligger.

OBS: Fasade i Sibirsk lerk skal skrues med varm-galvaniserte skruer. Fasade i termotre skal skrues med rustfrie skruer.

Bruk to spikre for bredder fra 173 mm og oppover.