

Operating Instructions

**CORDLESS
CAULKING GUN & SEALING GUN**

MODEL :

T75805148

T75805248

T75805348



Patent Pending

Operational Precautions

General Safety Instructions

WARNING

1. Consider work area environment. Do not expose tools to rain. Do not use tools in damp or wet locations : Keep work area clean and well lit. Do not use tools in the present of flammable liquids or gases.
2. Guard against electric shock. Avoid body contact with earthed or grounded surfaces.
3. Keep children away. Do not let visitors touch the tools or extension cord. All visitors should be kept away from work area.
4. Store idle tools. When not in use, tool should be stored in a dry locked up place, out of reach of children.
5. Do not force the tool. It will do the job better and safer at the rate for which it was intended.
6. Stay alert. Watch out what you are doing : Use common sense. Do not operate tool when you are tired. Check damaged parts. Before further use of the tool, a guard or other part is damaged should be carefully checked to determine that it will operate properly and perform its intended function.
7. Check for alignment of moving parts, blinding of moving parts, breakage of parts, mounting and any other condition that may affect its operation.
8. A guard or other parts that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated in this instruction manual. Have defective switches replaced by an authorized service center. Do not use tool if switch does not turn it on.
9. To ensure the designed operational integrity of power tools, do not remove installed cover or screws.
10. Use your tool at lower input than specified on the nameplate, otherwise, the finish may be spoiled and working efficiency reduced by motor overload.
11. Do not wipe plastic parts with solvent. Solvents such as gasoline, thinner, benzene, carbon tetrachloride, alcohol, ammonia and oil containing chloric annex may damage and crack plastic parts. Do not wipe them with such solvent. Wipe plastic parts with a soft cloth lightly dampened with soap water.
12. Dress properly. Do not wear loose clothing or jewelry. Contain long hair keep your hair, clothing, and gloves away from moving parts.
13. Use safety equipment. Always wear eye protection, non-skid safety shoes, hard hat, or hearing protection.
14. Do not overreach. Proper footing and balance enables better control of the tool in unexpected situations.

Product Safety Instructions

WARNING

1. Disconnect battery pack from tool or place the main switch in the locked or off position before making any adjustments, changing accessories, or storing the tool. Such preventative safety measures reduce the risk of starting the tool accidentally.
2. Remove adjusting keys or wrenches before turning the tool on . A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.
3. Use clamps or other practical way to secure and support the work piece to a stable platform. Holding the work by hand or against your body is unstable and may lead to a loss of control.
4. Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained tools, with sharp cutting edges are less likely to bind and are easier to control.
5. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool may create a risk of injury when used on another tool.
6. Over loading current protection :
 - PCB will automatically cut off the current supply when the motor is overloaded to protect motor from damage.
 - Check if the silica gel is congested. Release trigger switch and press again to re-activate.

Important Safety Instructions for Charger & Battery Pack

WARNING

1. Caution : To reduce risk of injury, charge only specific type rechargeable battery packs. Other types of battery packs may burst causing personal injury and damage.
2. Before using charger, read all instructions and cautionary markings on battery packs and chargers.
3. Do not expose charger to rain or snow.
4. To reduce the risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
5. Use of an attachment not recommended or sold by the charger manufacture may result in a risk of fire, electric shock, or injury to persons.
6. Make sure cord is located so that it will not be stepped on, tripped on, tripped over, or otherwise subjected damage or stress.
7. Do not operate charger with damaged cord or plug. Replace them immediately.
8. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damage in any way, take it to qualified center.
9. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
10. Do not disassemble charger or battery pack, take it to a qualified service center while repair is required. Incorrect reassembling may result in a risk of electric shock or fire.

Additional Safety Rules for Charger & Battery Pack

WARNING

1. Do not charge battery pack when temperature is below 10°C (50°F) or above 40°C (104°F).
2. Do not attempt to use a set-up transformer, an engine generator or DC power receptacle.
3. Do not allow anything to cover or clog the charger vents.
4. Always cover the battery pack terminals with the battery pack cover when the battery pack: is not used.
5. Do not short the battery pack.
6. Do not touch the terminals with any conductive material.
7. Avoid storing battery pack in a container with other metal objects such as nails, coins, etc.
8. Do not expose battery pack to water or rain, A battery pack short can use large current flow, overheating, possible burns and even a breakdown.
9. Do not store the machine and battery pack in locations where the temperature may reach or exceed 50°C (122°F)
10. Do not incinerate the battery pack even if it is severely damaged or completely worn out. The battery pack can explode in a fire.
11. Be careful not drop, shake or strike battery pack.
12. Do not charge inside a box or container of any kind. The battery pack must be placed in a well ventilated area during charging.
13. Do not leave batteries unused for extended period of time. Recharge the battery every 3~6 months and bring Li-Ion battery to 40~80% charge level before storage.
14. Li-Ion batteries are sensitive to high temperature and should be kept in a cool, dry and out of direct light exposure. Ideal temperature for operation and storage is below 25°C (77°F).
15. For extension of the battery lifetime, the lithium-ion battery is designed with the protection function to stop the output.
In the case of described below, when using this product, even if you are pulling the switch, the motor may stop.
This is not malfunction but the result of protection function.
 - When the battery power remaining runs out, the motor stops.
 - If the tool is overloaded, the motor may stop.
In this case, release the switch of tool and eliminate causes of overloading.
After that you can use it again.
 - If the battery is overheated under overload work, the battery power may stop. In this case stop using the battery and let the battery cool. After that you can use it again.
16. This product is designed with low voltage protection, which prevents the tool from over discharging and prolong battery's lifespan.

Specific Safety Rules and/or Symbols



-----Recycle



-----Do Not Throw In Garbage

a.c.-----Alternating Current

W-----Watts

mm-----Millimeter

kg-cm--Kilograms Per Centimeter

/min-----Revolutions or Reciprocations Per Minute



-----Class II Tool

V-----Volts

Hz-----Hertz

kg-----Kilograms


d.c. -----Direct Current

ft-lb-----Foot-Pound

Specifications

MODEL NO	T75805148	T75805248	T75805348
VOLTAGE	14.4V d.c.		
CAPACITY	310ml	400ml	600ml
EXPEL FORCE	650 Kgf		
NO-LOAD SPEED(mm/sec)	LOW : 3 mm/s HIGH : 10 mm/s		
TOOL WEIGHT (With Battery)	2.67kg (battery 0.53kg)	2.75kg (battery 0.53kg)	2.9kg (battery 0.53kg)
CHARGING TIME	1 Hour Auto Cut-off (±10 min)		

View the Major Components

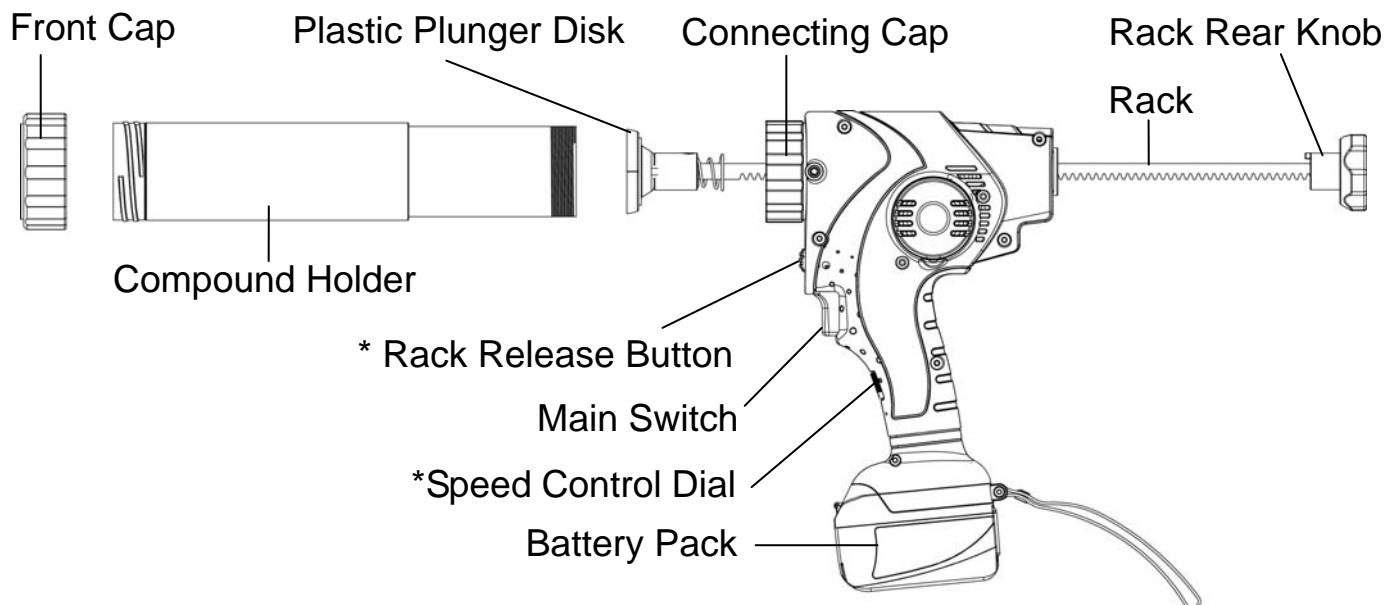

* Rack Release Button

Press this button to release clutch for moving the rack.

* Speed Control Dial

Speed control dial allows to change speed of rack (no-load speed 3mm~ 10mm/s) while in use.

Accessory



or



Operating Instructions (Slide-In) Installing or Removing Battery Pack (See Fig.1 Fig.2)

1. Always switch off the machine before insertion or removal of the battery pack.
2. To remove the battery pack, push the button on the battery pack and pull the tool unit from the battery pack in the direction.
3. To insert the battery pack, align the tool unit slides with the battery pack sliding groove and push the tool unit into place.
The tool unit can be slide into battery pack in two directions.
4. Do not force the battery pack in sliding it into tool unit. If the battery pack does not slide in easily, it is not being inserted correctly.

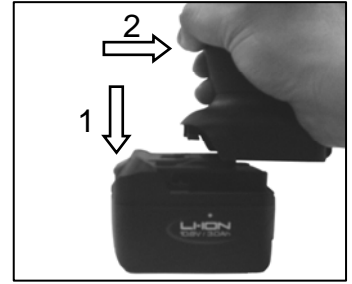


Fig.1



Fig.2

Charging the Battery Pack (See Fig.3)

1. Plug the fast charger into the power source.
2. Slide the battery pack into the charger as the arrow direction shown on the charger.
3. Push the battery pack into place and make sure the red light on the charger is "ON". The battery pack is now starting the charging cycle.
4. After finish the charging cycle, the light will turn into green. The battery pack is now ready for use.
5. Your new battery pack is not charged. You need to charge it before use.
6. If you try to charge a battery pack from a just-operated machine, sometimes the charging light will not come on. If this occurs, let the battery pack cool for a while then re-insert it and try to charge again.
7. When you charge a new battery pack or a battery pack which has not been used for a long period, it may not accept a full charge. This is a normal condition and does not indicate a problem. You can recharge the battery pack fully after discharging it completely a couple of times.
8. Unplug the charger from the power source after finish the charge.
9. Please remove the battery from the unplugged charger for storage.


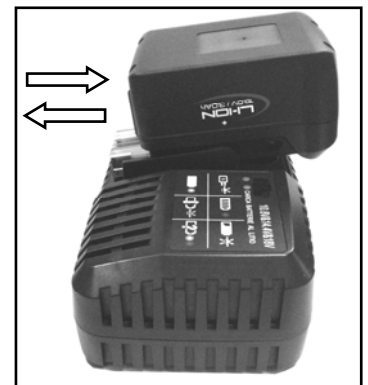


Fig.3

LED Indication Function

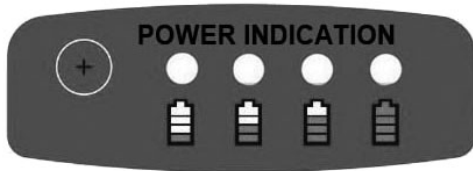


The Battery Pack has a “SW” button and 4-step green LEDs for indicating remaining capacity status and Over temperature condition.

The remaining capacity (**RC**) and temperature protection status green LED indications (3 second) when the “**SW**” button is momentarily pressed.

Remaining Capacity LED Indication	RC Status
LED 1 (green)	0%- 25%
LED 1, 2 (green)	26%-50%
LED 1, 2, 3 (green)	51%-75%
LED 1, 2, 3, 4 (green)	76%-100%
LED 1 Blinking (0.25Sec/green)	Fully Depleted
LED 1, 2, 3, 4 Blinking (0.5sec/ green)	Over Temperature condition

The LED Light on the Charger

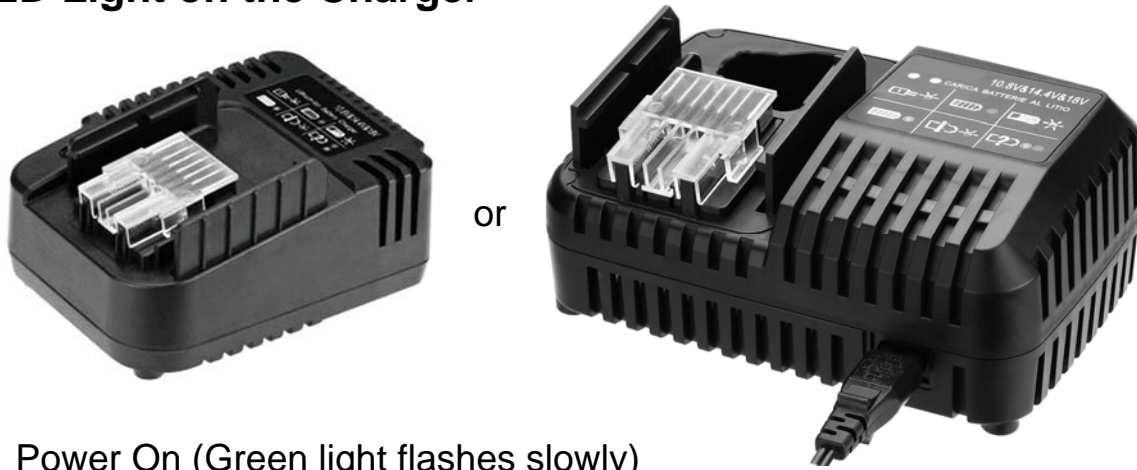

Power On (Green light flashes slowly)



Battery Low (Red light stays illuminated)



Battery charged 80% (Green light flashes rapidly)



Battery charged 100% (Green light stays illuminated)



Battery Pack temperature is too hot or too cold (Red light flashes slowly)



Battery Pack malfunction (Red and Green lights stay illuminated)

or



⚠ WARNING

1. Charger is plugged into a 100-240V a.c outlet only.
2. If the battery pack is too hot or too cold, the charger will not fast charge the battery pack and the red Indicator light is “blinking”. When the battery pack temperature returns to between 0°C(32°F) and 50°C(122°F), The charger will automatically begin charging.
3. If both red and green indicator lights are “ON” the battery pack either does not comply or is defective. Please contact your retailer.
4. Do not charge the battery pack in the rain, snow or high temperature environment.
5. Do not charge battery pack when environment temperature is below 0°C(32°F) or above 40°C(104°F)
6. While charge the cool battery pack (below 0°C) in the warm indoor, keep the battery pack in the room for one hour to warm up before starting the battery pack.
A cool battery may charge unsaturated.
7. Remove the plug after finishing the charge.
8. Do not use generator for charging the battery pack.

Tool Operation

For Sausage Bag Application

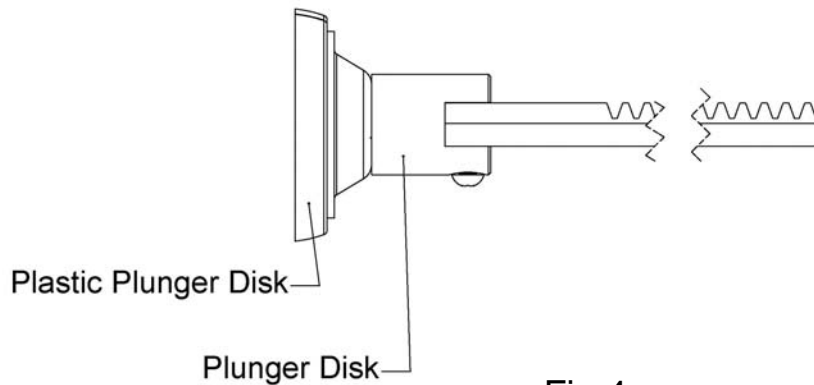


Fig.4

1. Cut a hole in one end of the sausage bag as shown in the figure below.


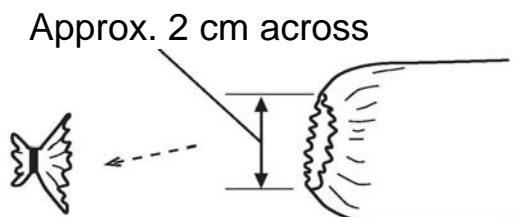


Fig.5

2. Remove the front cap. Fit the nozzle inside the front cap and cut off the tip at a point suitable for the job.

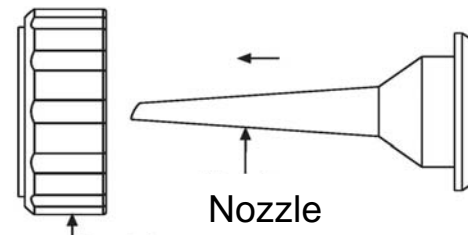

Front Cap

Fig.6

3. Insert the sausage bag into the compound holder.

Screw the front cap on tight. It is not necessary to pull back the rack by hand. Make sure the sausage bag is insert properly and sit up right on the plastic plunger disk.

4. Push the Rear Knob forward gently to force the rack tighten with the sausage bag.

For Cartridge Application

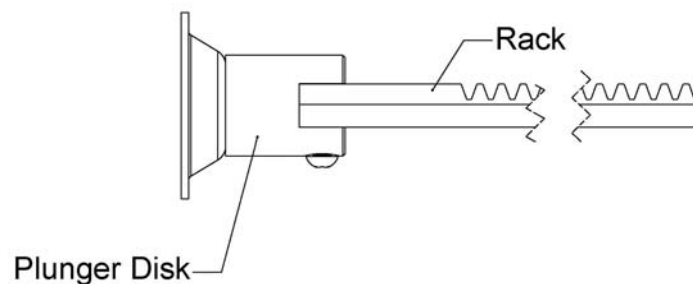


Fig.7

1. Firstly untighten and remove the compound holder.

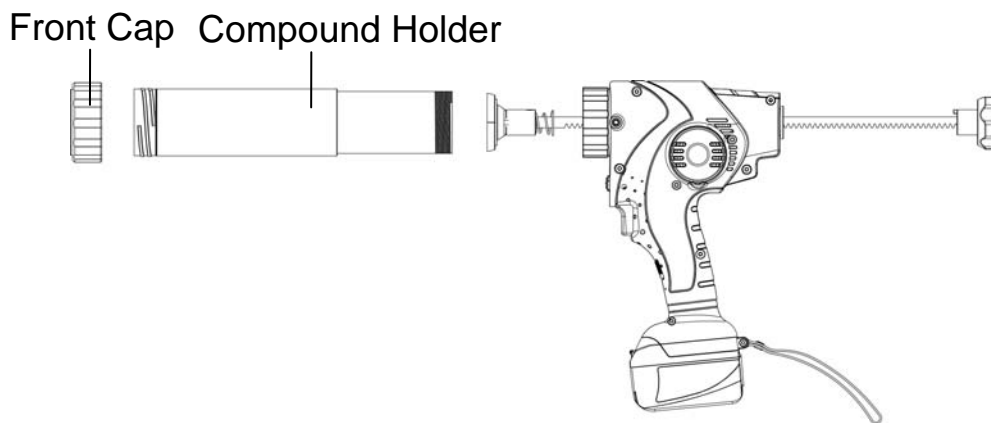


Fig.8

2. Loosen M8 Screw then remove the plastic plunger disk.

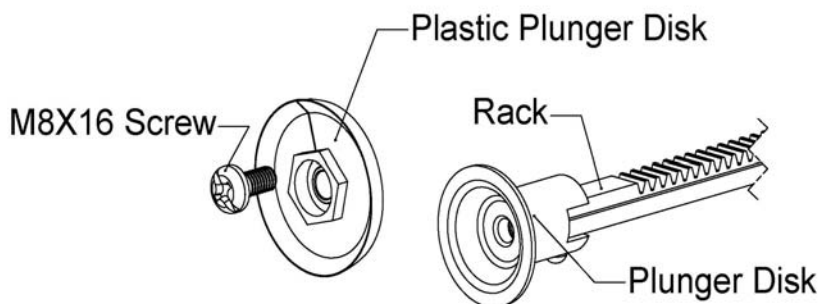


Fig.9

3. Fit M8 Screw back into the plunger disk and tighten it.

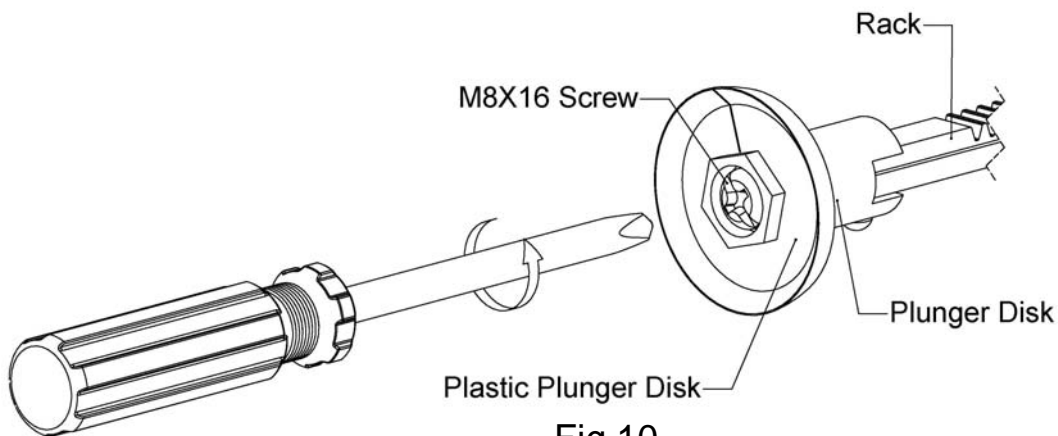


Fig.10

4. Screw back on the compound holder then remove the front cap.

5. Use a sharp knife to cut the tip of caulking tube at least 3 mm in diameter.

This will allow the tool to provide a optima seam width for most of applications.

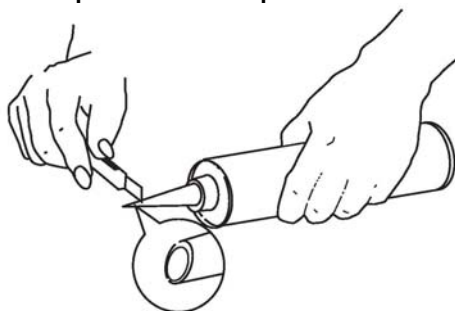


Fig.11

6. Use the sharp tip to jab the aluminum vena men on the caulking tube.

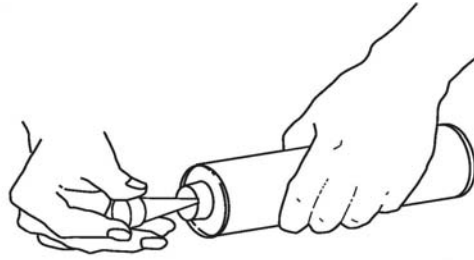


Fig.12

7. If you use a open tube left from last time or the caulking tube has been left not use for more than one hour, use a steel wire to remove the solid part inside the tube before reuse it.

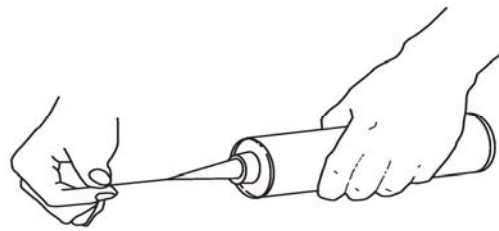


Fig.13

8. Insert the cartridge into the compound holder. Screw the front cap on tight. The rack will directly go back. It is not necessary to pull back the rack by hand. Make sure the cartridge is insert properly and sit up right on the steel head.

9. Push the rack rear knob forward to force the rack tightened with cartridge.

MODEL : T75805148/T75805248/T75805348

NO.	PARTS NAME	Q
1	FRONT CAP	1
2	COMPOUND HOLDER ASS'Y	1
3	FRONT CAP	1
4	SCREW	12
5	CONNECTION RING	1
6	GEAR BOX ASS'Y & RACK GUIDER	1
7	GEAR	2
8	WASHER	2
9	C RING	2
10	HOUSING-L&R	1
11	HOUSING LABEL-R	1
12	FIXITY	1
13	RACK REAR KNOB	1
14	SCREW	1
15	SCREW	1
16	PLASTIC PLUNGER DISK ASS'Y	1
17	PLUNGER DISK	1
18	SCREW	1
19	SPRING	1
20	RACK	1
21	RACK RELEASE BUTTON	1
22	SPRING	2
23	RACK RELEASE ROD ASS'Y	1
24	SCREW	2
25	MOTOR FIXITY RING	1
26	MOTOR ASS'Y	1
27	SCREW	3
28	SCREW	7
29	PCB ASS'Y	1
30	TRIGGER	1
31	SWITCH	1
32	SPEED CONTROL DIAL	1
33	SPEED CONTROL SHELL FRAGMENT	1
34	BELT	1
35	BATTERY PACK	1
36	FUEL GAUGE LABEL	1
37	BATTERY LABEL	1
38	CHARGER UPPER LABEL	1
38-1	MINI CHARGER UPPER LABEL(OPTIONAL)	1
39	CHARGER	1
39-1	MINI CHARGER(OPTIONAL)	1
40	CHARGER LOWER LABEL	1
40-1	MINI CHARGER LOWER LABEL(OPTIONAL)	1
41	POWER CORD	1
42	PUSHING BLOCK	1

